

ADDENDUM
INSTRUCTIONS FOR CAB-HOPPER CAB STEP
(Model# CH3000-01 and CH3000-02)

ENCLOSED: (8)1/4" x 3/4" Sheet Metals Screws, (2) Mounting Brackets. NOTE: You will also need (4)1/4"-20 x 1-1/2" Machine Screws, (4)1/4" Lock Washers, and (4)1/4"-20" Hex Nuts. These were provided with the step.


TOOLS REQUIRED: Electric Drill, Drill Bits 1/4" and 3/16". Phillip Screwdriver, Pliers, Wrench (Box or Open Ended).

TYPE D

This type of installation is used on the following vehicle models only:

- Chevy/GMC Full Size Pickup 1988-up
- Chevy/GMC Suburban 1992-up
- Chevy Blazer/GMC Yukon 1992-up
- Ford Full Size Pickup 1997-up

1. Align the top hole of the Mounting Bracket with the top hole of the step arm.
2. Bolt top hole of the Mounting Bracket to the top hole of the step arm with a 1/4"-20 x 1-1/2" Machine Screw, Lock Washer and Nut.
3. Using the fastened Bracket as template, drill a new hole on the step arm through the second hole of the bracket. NOTE: You will not be using the second hole that is already on the step arm.

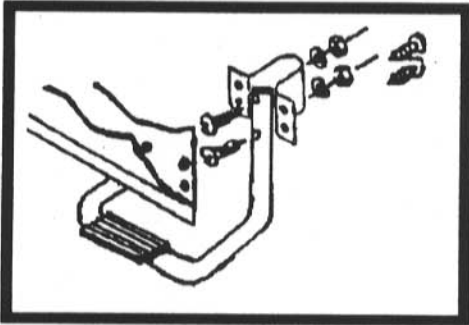

4. Use another set of 1/4"-20 x 1-1/2" Machine Screws, Lock Washers and Nuts to completely fasten the brackets to the step through the newly drilled holes.
5. Repeat steps #1 through #4 above with the second Mounting Bracket.
6. Once the Brackets are fastened to the step, position the step on the body flange under the door with the back support arm in line with the front edge of the driver's seat.
7. Mark mounting holes, using assembled step as a template.
8. Drill eight holes through box section above the flange with a 3/16" drill bit.
9. Fasten the step assembly on using eight 1/4"-3/4" Sheet Metal Screws.



Paramount, CA
1-800-653-0605

MADE IN USA
081998