

# Topline

7032 Alondra Boulevard \* Paramount California 90723  
P.O. Box 739 \* (562) 633-0605

## CUSTOM UNIVERSAL LADDER For all vans


Use set screws to hold  
Brackets to ladder.  
Attach to brackets.

Slide ladder brackets  
Up or down to desire  
Location for mounting.  
Top and bottom.

License Plate

Note:  
DO NOT obstruct view  
Of license plate. Space has  
Been provided in ladder.  
Design for maximum  
Visibility.

Use hex head self drilling  
Screws to hold ladder to  
Door (12 furnishes).

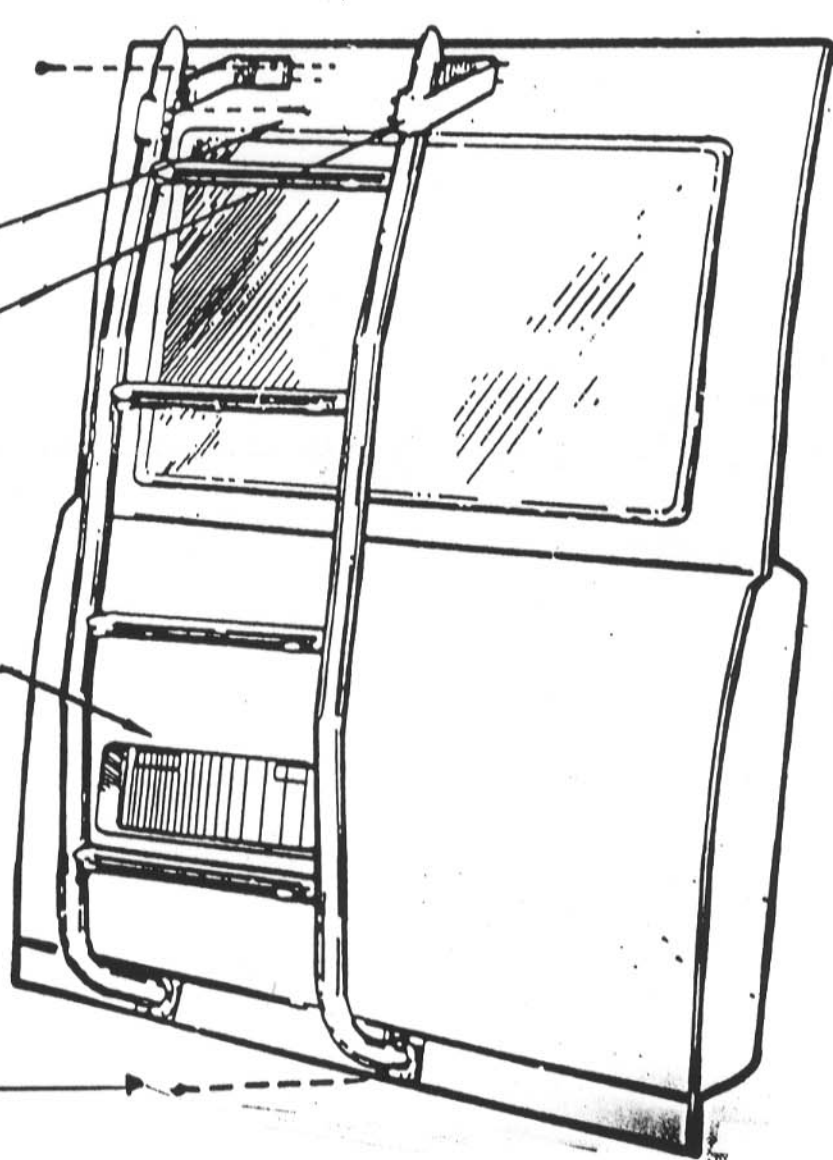

Side view  
Of ladder

### INSTALLATION INSTRUCTIONS