

Topline

7032 Alondra Boulevard • Paramount, California 90723
P.O. Box 739 • (562) 633-0605



INSTRUCTION SHEET UNIVERSAL STRAIGHTBACK LADDER Model 502L

INSTALLATION

YOU WILL NEED:

- ✓ Drill with 3/16" and 1/4" bits
- ✓ Phillips-point Screwdriver
- ✓ Hack saw or Tube cutter
- ✓ 24 Mounting screws (provided)

1. Assemble two ladder sections and top loops. (See Ladder Assembly)
2. Determine placement of ladder on coach. Note: standard length of 75" can be modified up to 77" by shortening the top loops. (Use the procedure illustrated for length adjustment.)
3. Locate desired points for the 2 support extensions.
4. Drill 1/4" holes thru ladder at desired locations and install supports.
5. Install on unit at desired location.

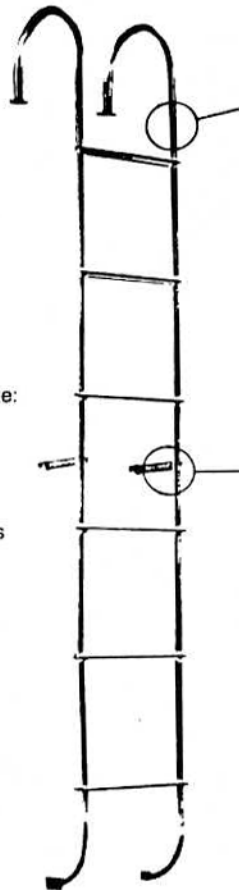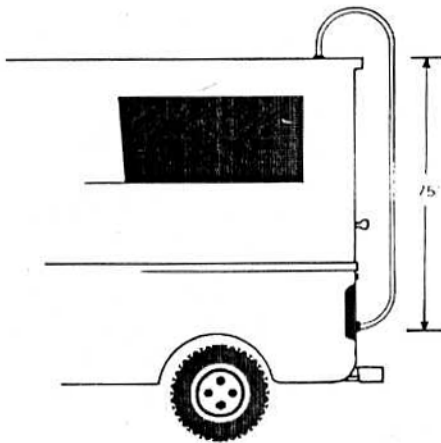


LADDER ASSEMBLY:

Assemble top loops to upper ladder assembly and upper assembly to lower assembly by inserting tapered rails into open rails. Fasten together by inserting 1 1/4" long screw through assembly and fastening with lock-nut.

2 Support extensions can be located any place up or down the ladder. Drill 1/4" holes thru ladder rails at desired location.

FOR LENGTH ADJUSTMENT

1. Cut straight section of loop to desired length and remove flange.
2. Drill 3/16" hole through Flange and Tube. Install with No. 10 x 1 1/2" screw and nut.

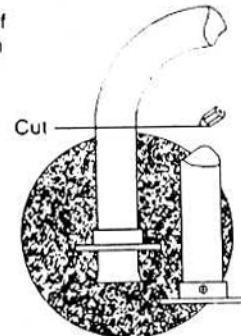

CAUTION: All screws connecting the ladder to the motorhome must be fastened to the motorhome's blocking. If you are uncertain about the blocking's location, contact your local dealer's service department. It is unsafe to use a ladder not connected to the motorhome's blocking.