

**INSTRUCTIONS**  
Universal Mini Assist Ladder  
(AL1900 and AL1910)

ENCLOSED:

- (1) Universal Mini Assist Ladder
- (2) Bumper Extensions
- (1) Allen Wrench

**Please check that you have the appropriate model for your vehicle.**

1. Hook your new Universal Mini Assist Ladder onto the last step of your Motorhome Ladder. Use Fig. A or Fig. B below.



Elliptical/Flat Step

FIG. A



Round/Square Step

FIG. B

2. Adjust the Cross Fit up or down, so that the openings for the bumper extensions are in line with the bumper, or other reinforced area of the rear wall.

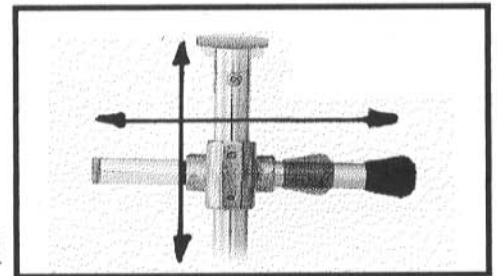


FIG. C

3. Insert a Bumper Extension into the Cross Fit of your Universal Mini Assist Ladder, and adjust to the desired length (Fig. C and D), so that the ladder is in a vertical position. Tighten in this position, with Allen Wrench.

4. Repeat step 2 and 3 with second bumper extension.

Questions or Comments? Contact Top Line Mfg., Inc. at 1-800-653-0605 (continental USA) or +(562)633-0605 (outside USA).

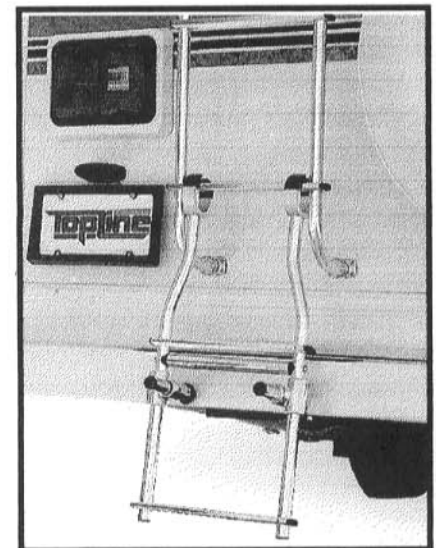


FIG. D



Paramount, CA