

INSTRUCTIONS

Bed-Hopper Tailgate Step

MATERIALS INCLUDED:

- *One Bed-Hopper Tailgate Step
- *Three #8x3/4" Philips Pan Head Type A Stainless Steel screws
- *Two #8x3/4" Flat Head Stainless Steel screws

TOOLS NEEDED:

- *Electric Drill
- *Philips Screwdriver
- *1/8" Drill Bit
- *Center Punch

IMPORTANT: For the safe and proper installation of this product, please follow instructions carefully.
Set truck parking brake prior to installation.

1. Open Tailgate.
2. Place Bed-Hopper Assembly on tailgate as shown in FIG. 1, making sure that the Bed-Hopper step bumper is against the tailgate.
3. Bracket must be mounted against the outer edge of tailgate, and 6 inches from the right or left hand side. (Fig. 1)
4. Using the bracket as a template, centerpunch the 3 hole center-lines from the bracket into tailgate. See Fig. 2 for location of holes.
5. Drill three 1/8" diameter holes where center punched. Mark drill-bit with tape 1/2" from point to prevent damage to other wall of tailgate. **IMPORTANT:** Prior to drilling, make sure edge of bracket is against the edge of tailgate.
6. Align holes in bracket with drilled holes, fasten to tailgate, using (3) Philips Head stainless steel screws provided(Fig. 2).
7. Locate two remaining holes on front of bracket. Using bracket holes as your guide, drill (2) 1/8" diameter holes, and fasten the (2) Flat Head stainless steel screws. See Fig. 3.
8. Side Rail or Tailgate side cable may be held for assistance when stepping up or down from the truck bed.

FIG. 1

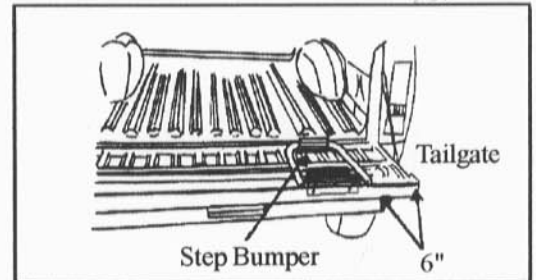


FIG. 2


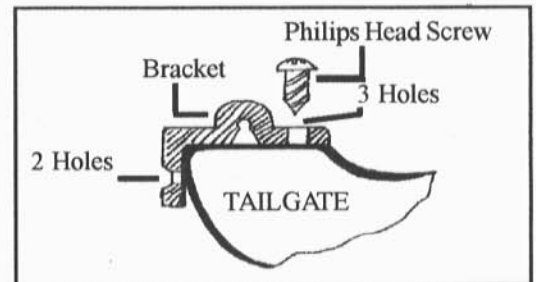


FIG. 3



BEDLINERS: PLEASE FOLLOW INSTRUCTIONS ABOVE.

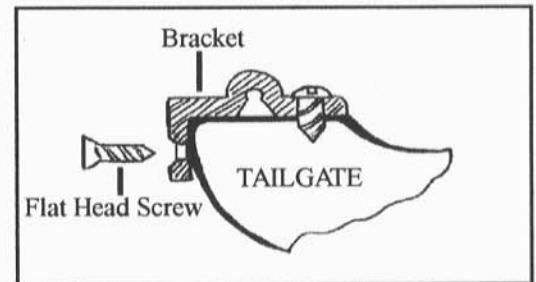